


Washer Dryer Quick Use Guide

Control Panel

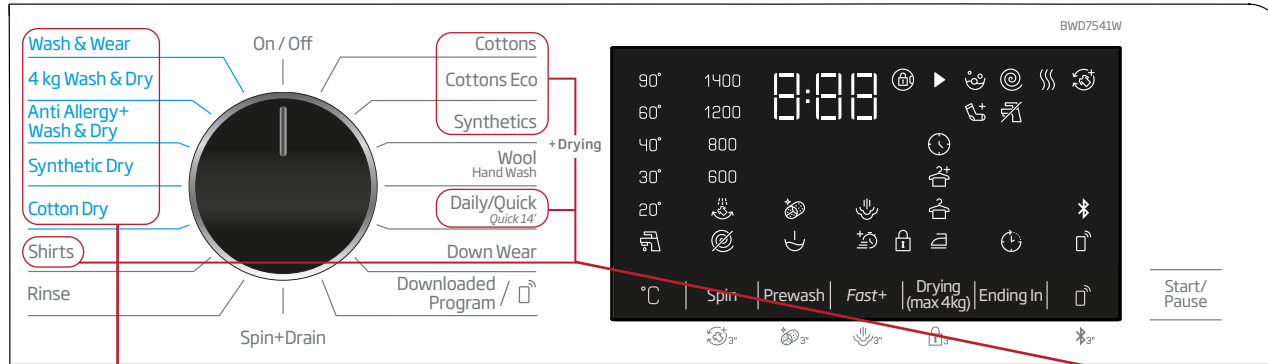

Drying and Wash & Dry Programs

Please use 4 kg load max when you operate drying programs.

EN	Programme (°C)	Max. Load(kg)	Auxiliary functions							Drying level	
			Steam	Prewash	Fast+	Anti-Crease+	Drying (max 4 kg)	Extra dry	Cupboard dry		Iron dry
Cotton Dry	Use to dry damp cotton laundry equivalent to 4 kg dry weight.	4				•	*	•	•	•	•
Synthetic Dry	Use to dry damp synthetic laundry equivalent to 2 kg dry weight.	3				•	*		•	•	•
Anti Allergy+ Wash & Dry	Use to wash and then immediately dry your laundry up to 2 kg which requires an anti-allergic and hygienic washing (baby clothes, bedding, etc.).	2	*			•	*	•	•	•	•
4 kg Wash&Dry	Use to wash cotton laundry up to 4 kg and dry it right after the washing cycle without making any other selection.	4				•	*	•	•	•	•
Wash&Wear	Use to wash and dry 0.5 kg laundry (2 shirts) in 40 minutes or 1 kg laundry (5 shirts) in 60 minutes.	0,5				•	*				•
		1				•	*				•

• : Selectable.

* : Automatically selected, no cancelling

Please refer to your user manual for additional information.

Washing Programs

Please use 4 kg load max when you select drying option.

EN	Programme (°C)	Max. Load (kg)	Auxiliary functions				
			Steam	Fast+	Prewash	Anti-Crease+	Drying (max 4 kg)
Cottons	Use for your cotton laundry (such as bed sheets, duvet and pillowcase sets, towels, bathrobes, underwear, etc.).	7,5	•	•	•	•	•
Cottons Eco	Use to wash your normally soiled, durable cotton and linen laundry. Although it washes longer than all other programmes, it provides high energy and water savings.	7,5					•
Synthetics	Use to wash your synthetic clothes (shirts, blouses, etc.). Your laundry will be washed with a gentle action for a shorter washing cycle when compared to the Cottons programme.	3	•	•	•	•	•
Daily-Quick / Quick 14'	Use this programme to wash your lightly soiled cotton clothes in a short time.	7,5	•	•		•	•
Daily-Quick / Quick 14'+Fast+	Use this programme to wash your lightly soiled cotton clothes in a short time.	2	•	•		•	•
Wool	Use to wash your woollen laundry. Select the appropriate temperature complying with the tag of your clothes.	1,5					
Down Wear	Use this programme to wash down coats, vests, jackets etc. that bear a "machine-washable" tag.	2	•				
Shirts	Use to wash the shirts made of cotton, synthetic and synthetic blended fabrics together.	3	•	•	•	•	•
Downloaded Program *****							

• : Selectable.

***** : These programmes can be used with the HomeWhiz application.

Please refer to your user manual for additional information.